


JuiceBar Gen 3 Series

Charging Station

Spec Sheet

JuiceBar Gen 3 Series: Level 2 AC EV Charger

Features

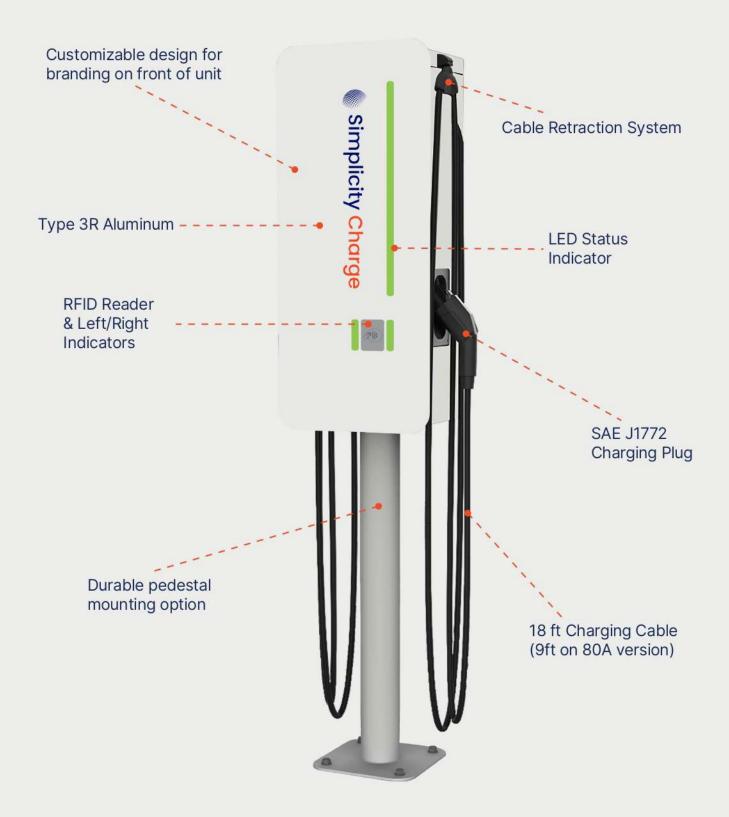

JuiceBar Gen 3 Series: Level 2 AC EV Charger

Specifications

Version	40A	48A	80A
Number of Ports	2	2	1
Power Specifications			
Input Voltage	208/240 VAC		
Breaker Rating	50A/100A		
Max. Power Output	9.6 kW at 240 VAC / 8.3 kW at 208 VAC	11.5 kW at 240 VAC / 10 kW at 208 VAC	19.2 kW at 240 VAC / 16.6 kW at 208 VAC
User Interface & Control			
User Authentication	RFID Card Reader		
Charging Interface	SAE J1772		
Communications			
External	Cellular (4G/LTE)		
Internal	OCPP 1.6 JSON		
Environmental			
Operating Temperature	-30° C to +50° C / -22° F to +122° F		
Mechanical			
Product Dimensions	36.5" x 16" x 12"		
Cable Length	18ft Standard		9ft Standard
Regulations			
Certificates	TUV Rheinland, UL 2231-1, UL 2231-2, UL 2594		

JuiceBar Gen 3 Series: Level 2 AC EV Charger

Quick Start Guide



Simplicity Charge

Quick Start Guide

To Start Charging





Firmly insert the charging connector handle into the charge port on your vehicle, ensuring the connector is secure, usually with a click.





OR





On the Hypercharge app, tap on this charger as shown on the map or enter the station ID listed below, then tap "Start". Charging will begin.

Authenticate your session by placing your RFID card, fob, or device on the wireless symbol located on the front of the charging station. Charging will begin.

To End Charging





2 Retrac



If your vehicle has a charging connector lock, release it. Press down firmly on the handle's latch to withdraw the connector.

Pull gently on the charging cord tether so it retracts. Place the charging connector into the holder on the station.

24/7 Support

Indicator Lights correspond to charger on the left or right side of charging station

















Checking Access Credentials

Charging Session In Progress

Discontinue Charging



Thank you!

support@simplicitycharge.com

